



Universal Shear Blade Guard

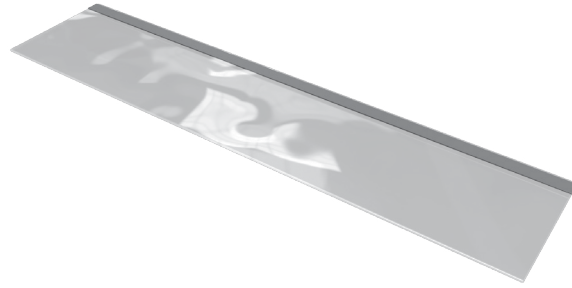


Instructions:

1. Measure width of shear to which blade guard will be attached
2. With the shear, cut both blade guard strips to the needed length
3. Peel protective layer from black adhesive strip
4. Place one blade guard strip over front lip of I-Beam or flat face of F-Beam
5. Press adhesive strip firmly into place
6. Place second blade guard strip on rear lip of I-Beam or F-Beam
7. Press adhesive strip firmly into place

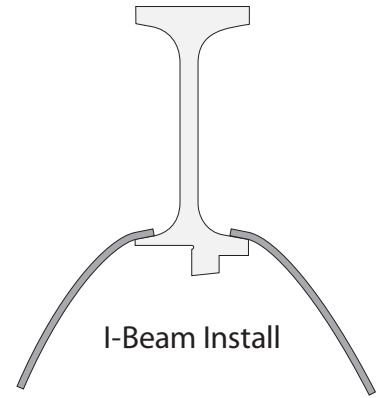


I-Beam Install

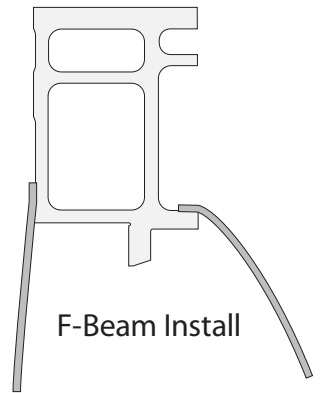

F-Beam Install


PRT-INS-UBGI.RevA.11.13 ©2014 Bullet Tools

Universal Shear Blade Guard

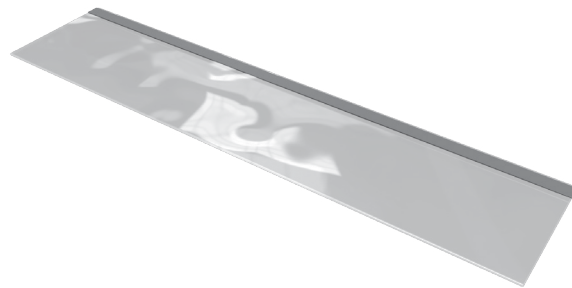


Instructions:

1. Measure width of shear to which blade guard will be attached
2. With the shear, cut both blade guard strips to the needed length
3. Peel protective layer from black adhesive strip
4. Place one blade guard strip over front lip of I-Beam or flat face of F-Beam
5. Press adhesive strip firmly into place
6. Place second blade guard strip on rear lip of I-Beam or F-Beam
7. Press adhesive strip firmly into place

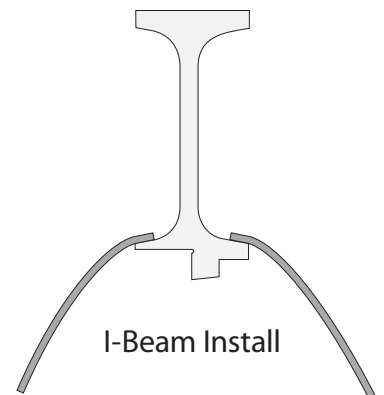

I-Beam Install

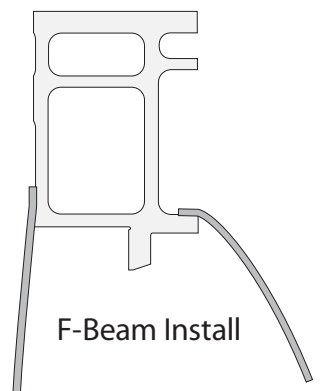

F-Beam Install

PRT-INS-UBGI.RevA.11.13 ©2014 Bullet Tools